

 primula®

Stainless Steel ESPRESSO MAKER

Stay cool silicone handle

READ WARNINGS before first use
USE INSTRUCTIONS



1

Unscrew top; remove filter funnel.



2

Fill base with water to the level of safety valve. Replace funnel into base and fill it with ground coffee; do not press coffee down. For best result, use fresh roasted, finely ground coffee. The recommendation is to use a 6-to-1 water to coffee ratio. For each tablespoon of coffee, use 3 oz. of water.



3

Tighten top to base.



4

Heat espresso maker on low to medium temperature until coffee bubbles to top. Remove from heat and serve.



Stainless Steel ESPRESSO MAKER

Stay cool silicone handle

BEFORE FIRST USE

- Before using the espresso maker for the first time, wash all parts in hot water.
- It is recommended that the first "Brew" be thrown away.

CLEANING INSTRUCTIONS

- Separate top section from base, hand wash in warm water and dry thoroughly.
- Do not use detergent when washing.
- Do not put in dishwasher. Hand wash only.

SAFETY INSTRUCTIONS

- Do not overfill water in the base; espresso makers work on a pressure system.
- The espresso maker is not suitable for keeping coffee hot.
- Always use potholders when handling hot espresso maker.
- Never use espresso maker without water.
- Use ground coffee only. Never use extracts, infusions, or instant coffee; they will block filter plate.
- When using on gas, control flame from extending up the side of the espresso maker.

Thank you for purchasing this Primula® Espresso Maker. We hope you enjoy the quality craftsmanship of this splendid product.



Like us on Facebook and post your extraordinary moments.



Visit us at primulaproducts.com

Epoca[®]
INTERNATIONAL, INC.

Boca Raton, FL 33487
Made in China