

OUTSIDE PANEL

Thank you for purchasing this Primula® Classic Coffee Press. We hope you enjoy the quality craftsmanship of this splendid product.

USE EXTREME
CAUTION
HOT WATER
POINT SPOUT
AWAY FROM YOU
PRESS PLUNGER
SLOWLY

Epoca
INTERNATIONAL, INC.

Boca Raton, FL 33487
Made in China

PCRE-6408-T

Like us on facebook
and post your
extraordinary moments.



Visit us:
primulaproducts.com



primula®



**Classic
COFFEE
PRESS**

For French
and American
style coffee

8 Cup

INSIDE PANEL

CLEANING INSTRUCTIONS

- To clean the coffee press, remove the plunger.
- Rinse out the remaining coffee and hand wash with warm, soapy water.
- Rinse with clean water.
- Allow it to dry.

DISHWASHER SAFE

SAFETY INSTRUCTIONS

- Do not use fine ground coffee; it clogs the filter.
- Use only plastic spoon for stirring; using metal spoon will cause damage to glass beaker.
- Do not press plunger hard or fast; it will cause spillage.
- Always look for chips and cracks in glass beaker. Do not use if any are found.
- Never use on stovetop or in microwave.
- Keep out of reach of children.

THIS DEVICE USES VERY HOT WATER. USE CAUTION.

USE INSTRUCTIONS

- 1 Remove plunger; add 1 Tbsp. of coarse ground coffee for every 4 oz. cup. Do not use fine ground coffee, it clogs the filter.
- 2 Add hot water. The maximum fill is 1 inch away from the top. Stir gently with a plastic spoon. Use only plastic spoon for stirring; using metal spoon will cause damage to glass beaker.
- 3 Replace plunger back to the beaker with plunger in up position.
- 4 Allow coffee to brew for at least 4 minutes or to desired taste. Grip the handle, turn the spout away from you and press the plunger down slowly. CAUTION: Pressing too fast on plunger can cause hot coffee to splash out of spout. Serve and enjoy.

